

Programming the amount of coffee

tronic by ascaso

Electronic push-button control functions.

S: small coffee

L: large coffee

XL: non-stop coffee (push button again to stop flow)

Programming the amount of coffee:

- 1 With the machine on, push the "XL" programming button for 5 or 6 seconds until the LED flashes.
- 2 Push the "S" small coffee button. The LED will light up, at the same time the "XL" programming LED stops flashing. Let the coffee flow.
- 3 Once you have the desired amount, push the "S" again. The machine is now programmed.

(To programme large coffee "L", repeat the operation.)

To personalise the amount of coffee (non-stop), push the "XL" button. Once you have the desired amount, push the button again to stop the flow of coffee.

Graphic guide:




Short coffee.
Café corto.
Café court.



Large coffee.
Café corto.
Café long.



Programming.
Programador.
Programming.

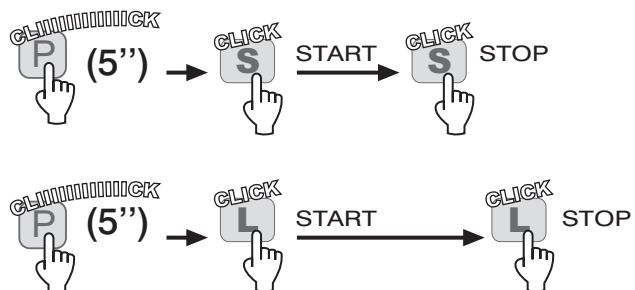

Coffee continuous.
Café continuo.
Café continu.

